


Installation instructions for Running Boards
suitable for Mercedes GLE W167 (2019-up)

Code RBMBGLEW167

1. Remove the original car side skirts
2. Install the inner frame on the car (as shown in the picture below)



Install plastic nuts in the upper row

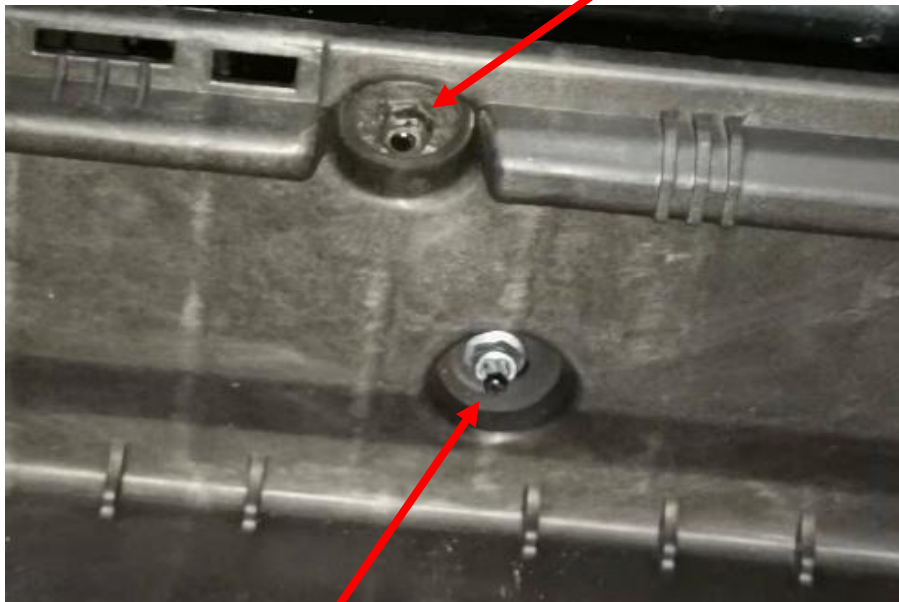

Install metal nuts in the lower row

Installation instructions for Running Boards
suitable for Mercedes GLE W167 (2019-up)

Code RBMBGLEW167



3. Align the pedals with the holes in the frame and install them on the frame, and pat tightly (tighten the bottom first, then the upper part)



Press the bottom
tightly first



Press the upper
part tightly

Installation instructions for Running Boards
suitable for Mercedes GLE W167 (2019-up)

Code RBMBGLEW167

4. Repeat on the other side

